


Instructions that are preppacked with any product may override these diagrams.

STUD MOUNT ASSEMBLY / COAX CONNECTION

MOST IMPORTANT: No continuity should exist between the antenna base (or coupling nut) and the mounting bracket (or mount surface).

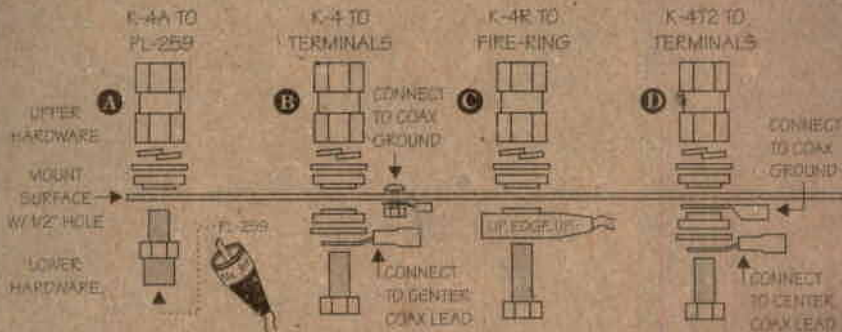

- A** Using two 5/8" wrenches, tighten assembly until metal lock washer is compressed. Plug-in and screw-on PL-259 terminated coax cable.
- B** Attach center coax lead to insulated terminal. Using two wrenches (5/8" & 9/16"), tighten assembly until metal lock washer is compressed. Attach coax shielding to ground.
- C** Install Fire-Ring connector with lip edge facing mount surface. Using two 5/8" wrenches, tighten assembly until metal lock washer is compressed.
- D** Attach center coax lead to insulated terminal. Attach coax shielding to ground terminal. Using two wrenches (5/8" & 9/16"), tighten assembly until metal lock washer is compressed.

Product Warranty

One year against manufacturer's defects on all non-stainless steel mounts (K models) and accessories.

Two years against manufacturer's defects on all stainless steel mounts (SS models) and accessories.

Write or call for your FREE full line Firestik catalog or visit our web site: <http://www.firestik.com>

Firestik Antenna Company
2614 E Adams St, Phoenix, AZ 85034
tel: 602-273-7151, fax: 603-273-1636

FireStik
ANTENNA COMPANY

YOUR COST

STAINLESS STEEL

Universal Edge Mount

FireStik SS-184A

w/ K-4A Stud and Washer

- ◆ Use on any flat edge, hood rail, bumper, etc.
- ◆ Two year warranty



ACCESSORIES