

MOONRAKER



DVB • W9

MINI LCD TV

- 9 inch TV with LCD screen, backlit with LED lighting
- Receives all free to air channel and radio stations with built in DVB-T2 tuner
- Internal battery with 4-5 hours playing time
- 240v mains or 12/24v charging PSU adapter included
- Turn your TV into a digital photo frame or MP3 music player with the use of the in-built USB port
- Internal stereo speakers or use the 3.5mm jack for headphones or external speakers
- HDMI in/out connection for set top box connection
- Adjustable stand allows you to view at any angle.



Also included:
 RCA Cables
 Cigarette Plug Adapter
 Power Adapter
 Remote Control

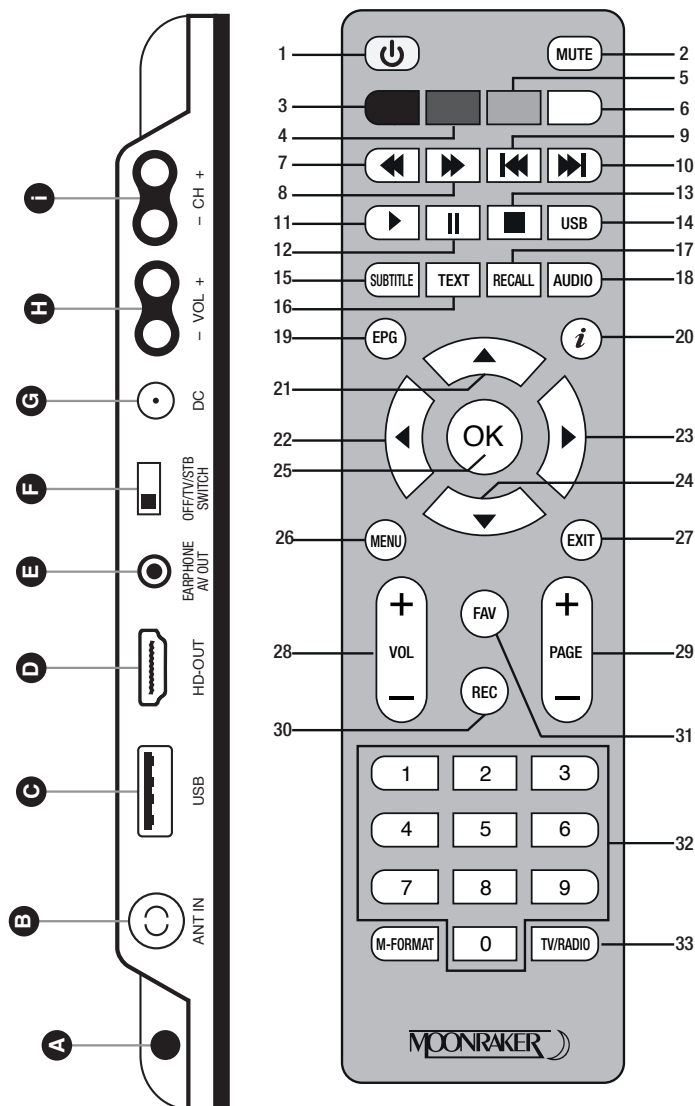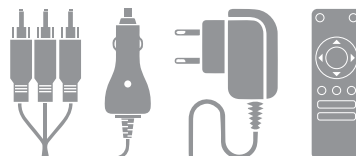


TV

- A** The antenna of picking up DVB-T2 signal
- B ANT IN:** Connect to an external RF signal
- C USB:** External media files
- D HD-OUT:** Outputs video and analogue audio signal
- E EAR PHONE AV OUT:** 3.5mm jack for use with headphones/external speakers
- F OFF/TV/STB SWITCH:** Used to switch ON/OFF the system, turn on the system in DVB mode / turn on the system in STB mode
- G DC:** AC-DC adaptor input
- H - VOL +:** Change volume and move around the menu screen
- i - CH +:** Change channel and move around the menu screen

Remote Control

- 1** : Power switch, turns ON/OFF the TV
- 2** **MUTE:** Turn the sound OFF/ON
- 3** **RED:** Various different functions. Use when bottom of screen shows colour
- 4** **GREEN:** Various different functions. Use when bottom of screen shows colour
- 5** **YELLOW:** Various different functions. Use when bottom of screen shows colour
- 6** **BLUE:** Various different functions. Use when bottom of screen shows colour
- 7** : Searches backward during media playing
- 8** : Searches forward during media playing
- 9** : Skips to previous track during media playing
- 10** : Skips to next track during media playing
- 11** : Start media playing
- 12** : Resumes media playing
- 13** : Stop media playing
- 14** **USB:** Open USB file
- 15** **SUBTITLE:** Turns ON/OFF the subtitle language
- 16** **TEXT:** Displays teletext information
- 17** **RECALL:** Switch between last two viewed channels
- 18** **AUDIO:** Used to exchange the audio language or the audio track
- 19** **EPG:** Displays the Electronic Programme Guide
- 20** **i** : Displays information about the channel being viewed
- 21** : Move around menu screens or select channels in non menu state
- 22** : Navigate (left) menu screens or decrease the volume
- 23** : Navigate (right) menu screens or increase the volume
- 24** : Move around menu screens or select channels in non menu state
- 25** **OK:** Confirm a selection in menu
- 26** **MENU:** Opens main menu window
- 27** **EXIT:** Exit or return to previous interface
- 28** **+ VOL -:** Increase or decrease volume
- 29** **+ PAGE -:** Change channel
- 30** **REC:** Enter record
- 31** **FAV:** Access your favourite channels
- 32** **Number Keys:** Select channel numbers or input numbers in menus
- 33** **TV/RADIO:** Switch between TV channels and Radio stations


HOW TO USE THE TV

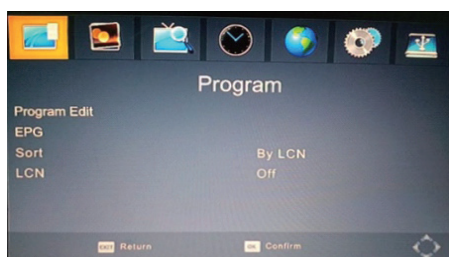

- 1 Program Setting**
 Press MENU button
 Use ◀▶ buttons to navigate to Program tab
 Use ▲▼ to operate all the Program setting options
 Press EXIT button to exit MENU



- 2 Picture Setting**
 Press MENU button
 Use ◀▶ buttons to navigate to Picture tab
 Use ▲▼ to operate all the Picture setting options
 Press EXIT button to exit MENU

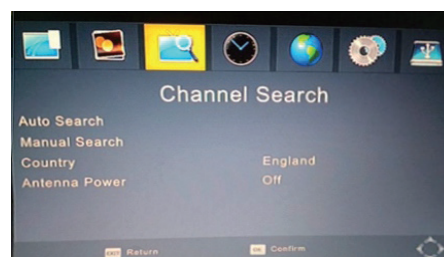


- 3 Channel Search**
 Press MENU button
 Use ◀▶ buttons to navigate to Channel Search tab
 Use ▲▼ to operate all the Channel Search options
 Press EXIT button to exit MENU




- 4 Time Setting**
 Press MENU button
 Use ◀▶ buttons to navigate to Time tab
 Use ▲▼ to operate all the Time options
 Press EXIT button to exit MENU



 
- 5 OSD Language**
 Press MENU button
 Use ◀▶ buttons to navigate to Option tab
 Use ▲▼ to operate all the Language settings
 Press EXIT button to exit MENU

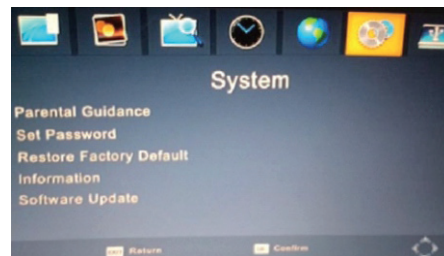

 
- 6 System Setting**
 Press MENU button
 Use ◀▶ buttons to navigate to System tab
 Use ▲▼ to operate all the system settings
 Press EXIT button to exit MENU

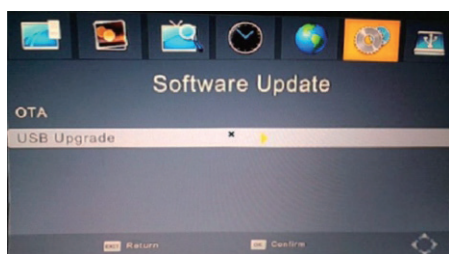

 - 7 USB Upgrade**
 Press MENU button
 Use ◀▶ buttons to navigate to Software Update tab
 Use ▲▼ to navigate to USB Upgrade, press OK
 Press EXIT button to exit MENU

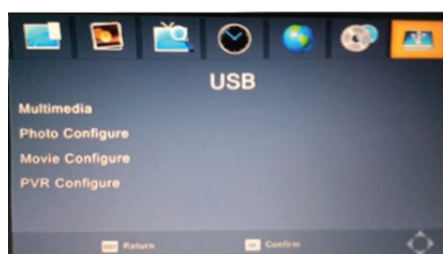

 - 8 USB / Multimedia Player**
 Press MENU button
 Use ◀▶ buttons to navigate to USB tab
 Use ▲▼ to select option
 Press EXIT button to exit MENU

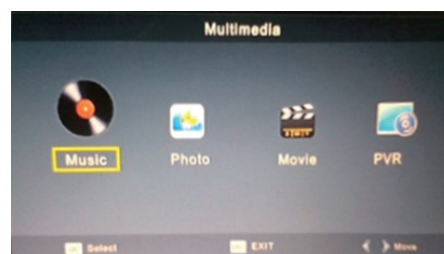

- 9 Multimedia**
 Press MENU button
 Use ◀▶ buttons to navigate to USB tab (See 8)
 Use ▲▼ to select Multimedia
 Use ◀▶ buttons to select the multimedia option
 Press EXIT button to exit MENU

Model	DVB-T2 TV	Video System	MPEG-2, MPEG-4,H,264,AVS	Max Frequency Offset	50KHz
Colour	Black	Power Output	DC 12V 2A	Subtitle Language	Catalan, Czech, Dansk, German, English, Spanish, Greek, French, Croatian, Italian, Hungarian, Dutch, Norwegian, Polish, Portugese, Russian, Romanian, Slovene, Serbian, Finnish, Swedish, Bulgarian, Gaelic, Thai, Welsh
Wide Screen Support	YES	AC Input Voltage	AC90-250V. 50-60Hz	Audio Language	Catalan, Czech, Dansk, German, English, Spanish, Greek, French, Croatian, Italian, Hungarian, Dutch, Norwegian, Polish, Portugese, Russian, Romanian, Slovene, Serbian, Finnish, Swedish, Bulgarian, Gaelic, Thai, Welsh
Type	TFT-LED	Amplifier	2x3W (40	OSD Language	English, French, Deutsch, Italy, Thai, Portugese, Espanol, Russian, German
Size	9 Inch	Operation Temp	0°C to 40°C	Storage Temp	-20°C to 70°C
Max Resolution	1080 x 720p	Battery	4500mah	Humidity	Less than 95%
Receiving Range	48.25MHz - 863.25Hz	Battery Life (TV Mode)	4-5 hours		
Video System	PAL/NTSC	Battery Life (STB mode)	4-5 hours		
Sound System	5.5MHz BG/6.5MHz DK	Frequency Range	VHF: 174-230MHz/UHF:470-806MHz		
Max Storage Channels	200 Channels	Band Width	7MHz, 8MHz		
Channel Bandwidth	8MHz	Input Impedence	75		
Aspect Ratio	16:9 pillar box	Input Level	-75~25DBM		
Modulation	TDS-OFDM	Noise Figure	6DB		

MOONRAKER

Why not try from the Moonraker range the **DTV-1000 Digi Pro**

A complete digital antenna pack designed for digital TV reception. An integrated low noise amplifier, plus flexible & varied mounting options make the DTV-1000 the simplest way to enjoy digital TV at home or on the road.

**DTV-1000
 USE WITH
 YOUR MINI
 LCD TV!**

