


AOR AOR, LTD.

EM8200

EXTERNAL MEMORY

For **AR8200**

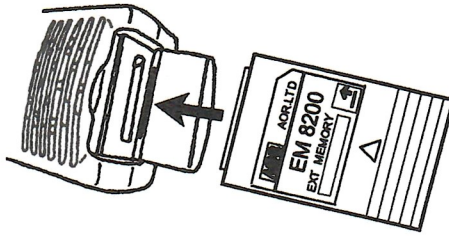

AR8200用 外部メモリカード説明書

取り扱い方法と注意

- 本カードの脱着はAR8200の電源を切った状態で行います。
- 1. スピーカーの下部分にあるオプションカード・スロットのフタを下げて、開ける。
- 2. 右上の図のようにカードのシールの面を上にして底面のスロットに差し込む。
- カードをAR8200に取り付ける時は無理に押し込まないようにしてください。
- 内部端子が破損することがあります。
- 3. しっかり差し込み、フタをしめる。
- 外す時はイジェクトレバーで外しますが、この時カードを落とさないようにしてください。
- 4. カードを取り出す場合電源を切り、フタを開け、本体横のイジェクト・ツマミを上上げる。
- ◎カードを落とさないようにして下さい。
- 使用しない時は付属のカバーに入れてください。

仕様

メモリhc 4000ch
サーチバンク 160バンク など4台分

操作方法

始めに下記の操作を各ブロックに対して行わないと、そのブロックは使用できません。

1. **[OJ]** キーを1秒間押す。
2. **[PASS]** キーで「SAVE」を反転させる。
3. 「ダイヤル」または「[◀] [▶]」キーでセーブするブロック番号を「[0]」～「[3]」の中から選ぶ。
4. 「[▼]」キーを押す。
5. 「ダイヤル」または「[◀] [▶]」キーで「ALL-DATA」を選ぶ。
6. **[ENT]** キーを押す。

詳しくは本体マニュアル応用編p127ページをご覧ください。

The use of the EM8200 optional SLOT CARD is detailed in the English language operating manual. The EM8200 enables storage of up to 4 times the internal data capacity of the AR8200 for backup and management.

ALWAYS SWITCH THE AR8200 OFF WHILE INSERTING OR REMOVING THE SLOT CARD.

Fitting the EM8200: Refer to section 18-1-1 page 121 of the manual. Insert into the open slot face upward in the direction of the arrow.

Operation of the EM8200: Refer to section 18-6 page 127 of the manual. To access the EM8200 menu, PUSH [F] PRESS [OJT].

Removing the EM8200: Refer to section 18-1-2 page 122 of the manual. Use the side eject button to remove the slot card.

Caution: Do not drop the module, keep away from moisture & water. Locate in a dust free area away from excessive vibration and temperature extremes. Do not fit in backwards or upside down, do not use excessive force.

Note: You cannot scan or search the backup information, data must be loaded back into the AR8200 before these processes can be activated.